

Channel Setting for the **ResponseCard® RF**

1. Press and release the "Ch" button.
2. While the light is flashing red and green
Enter 2 digit code.
(ie. channel 1=01, channel 21=21).
3. After the second digit is entered,
Press and release the "Ch" button.

LED Color Description:

Red - Response was not received

Green - Response was received

Yellow (Multiple Flash) - In the process of sending

Yellow (Single Flash) - Polling not open

